



The University of Texas at Austin
Aerospace Engineering
and Engineering Mechanics
Cockrell School of Engineering

ASE 375 Electromechanical Systems
Section 14115

Monday: 3:00 - 6:00 pm

Report 4: Measuring Pressure Vessels

Andrew Doty, Andres Suniaga, Dennis Hom
Due Date: 02/26/2024

Contents

1	Introduction	2
2	Equipment	2
3	Procedure	4
3.1	Part 1: Poly-carbonate Vessel	4
3.2	Part 2: Aluminum Soda Can	5
4	Data Processing	5
4.1	Variables and Equations	5
5	Results and Analysis	6
6	Conclusion	8

1 Introduction

In this experiment we (1) Learn how to measure pressure with different sensors, (2) Construct a Wheatstone quarter-bridge circuit, and (3) Develop an understanding for strain gauge measurements.

This is a two-part experiment of gathering output voltage readings from pressure changes of two vessels containing liquid. The first part involves calibrated pressure transducers and a full strain gauge bridge with a direct application of internal pressure to the vessel. The second part involves constructing a quarter-bridge circuit to read strain measurements on a soda can as pressure is released. These demonstrations set a foundation for understanding the precision and sensitivity of these sensors used to measure strain and pressure.

2 Equipment

Devices and hardware used in this lab include:

- Digital Calipers:

Used for measuring outer and inner dimensions of objects. In our case we use it to the measure the wall thickness of the soda can in *mm*.

- PX309 SERIES Pressure Transducer/Transmitter:

Calibrated pressure transducer used to measure and convert pressure to an analog electrical signal or an output voltage. For this lab, the transducer is connected to a cylindrical poly-carbonate vessel containing liquid and is used alongside a full strain gauge bridge.

- Strain Gauge:

Sensor used to measure surface strains which then converts it into a change in electrical resistance. An output voltage is produced when a surface strain occurs since there is a resistance change within the bridge configuration.

- Cylindrical Poly-carbonate Vessel:

A vessel containing a liquid equipped with a pressure transducer, full strain gauge bridge, a pressure regulator, and valves for the intake and release of pressure. We conduct Part 1 of gathering measurements with this vessel.

- Aluminum Soda Can:

A full diet coke can strapped with a strain gauge sensor for Part 2 of measurements in this lab. The can is then opened to release the internal pressure for which we gather our strain measurement.

- 320 Grit Sand Paper and Clear Tape:

Used to smooth the surface of the Aluminum soda can. The strain gauge sensor can then be securely adhered to the surface of the soda can. The clear tape is for adhering the strain gauge to the surface of the soda can.

- Pressure Regulator/Dial:

A dial used to adjust the internal pressure of the Poly-carbonate vessel.

- DAQ, NI-9215 Voltage Input Module, and LabVIEW:

Data Acquisition System used to process sample measurements into digital data. NI-9215 is an analog input module used to measure the output voltage signals of sensors and send it through the DAQ system. LabVIEW used to model these output voltages read from the DAQ of the transducer and strain gauge measurements.

- Solderless Breadboard, Jumper Wires, and 350Ω Resistors:

Used to make connections to the input analog modules and to construct circuits. In Part 2 of this lab we build the Wheatstone quarter-bridge circuit with three 350Ω resistors as shown below:

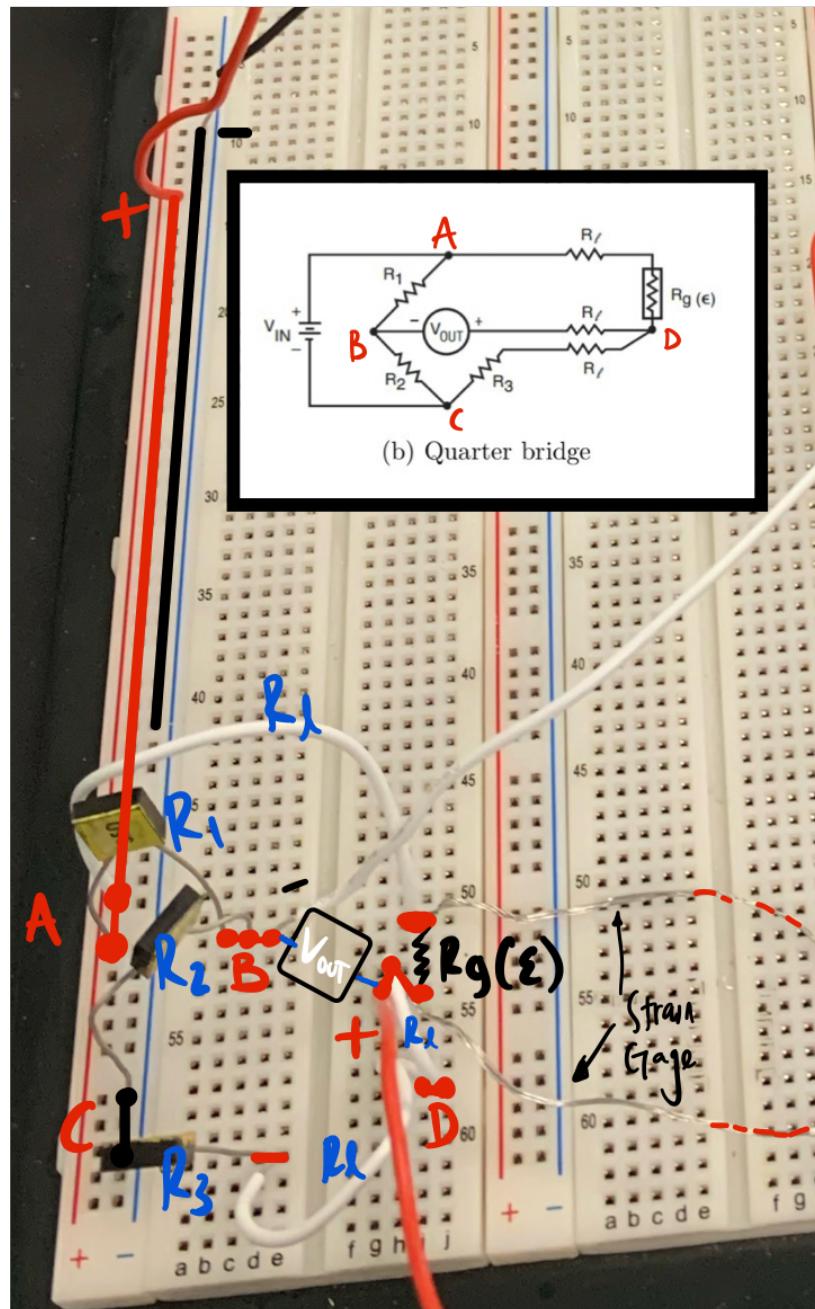


Figure 1: Quarter-Bridge Configuration with the strain gauge resistance $R_g(\epsilon)$

3 Procedure

The procedure for this experiment is broken up into two parts:

3.1 Part 1: Poly-carbonate Vessel



Figure 2: Part 1: Devices Attached to the Poly-carbonate Vessel

1. Make sure all connections from the pressure transducer and Wheatstone bridge are powered and connected to the input analog module (NI-9215). Set up and run LabVIEW to plot the output voltages.
2. Before starting to adjust the pressure dial, release all the pressure or air from the vessel. To do this, close the pressure valve and twist the air valve slightly such that it was open about a quarter of the way (labeled in **Figure (2)**). Unlock the knob and carefully increase the pressure dial until you hear the release of air. Let it release slowly. Once all the air has been released, turn back the knob and lock it, close the air valve, and open the pressure valve.
3. Start by marking down the $P_0 = 0 \text{ psi}$ pressure readings of the pressure transducer and Wheatstone bridge sensors from LabVIEW.
4. Unlock the knob and slowly twist it until the pressure dial hand turns ΔP to the next pressure P_1 . Lock in the knob. We choose $P_1 = 5 \text{ psi}$ using step $\Delta P = 5 \text{ psi}$ for our measurements.
5. Ensure the plot of the output voltage approaches an approximate steady state. Record the data of each sensor for P_1 and unlock and move the dial again by ΔP to P_2 . Lock the knob and record the output voltages at P_2 .
6. Repeat ΔP movements of the pressure dial up to P_f (at least 5 or 6 measurements), not to exceed $P_{max} = 50 \text{ psi}$. Record the output voltage of each sensor from LabVIEW for each P_i . We chose to gather $i = 6$ measurements so that $P_f = P_6 = 30 \text{ psi}$.
7. Once finished, close the pressure valve and turn the knob all the way back to 0. Slightly and slowly open the air valve again to release all the pressure. This may require carefully increasing the knob to release the rest of the air. After all the air is out, close the air valve and turn the knob all the way back and lock it.

8. With these output voltage readings we can now process this data to obtain a pressure measurement from the sensors.

3.2 Part 2: Aluminum Soda Can

1. Acquire the soda can and begin sanding a spot on the surface of the soda can until the spot is just the plain aluminum surface (or sand for ≈ 1 min). This is to smoothen out the surface of the soda can in order to make adhesion easier.
2. With the clear tape, stick the strain gauge on the plain aluminum surface of the soda can.
3. Grab three 350Ω resistors and jumper wires. Construct the quarter-bridge circuit as seen in **Figure (1)** with the Strain Gauge. For measuring the output voltage V_{OUT} , connect wires from the null center of the bridge to the NI-9215.
4. Run LabVIEW to test the sensor. Place a finger on the strain gauge and carefully apply force to check that the resulting V_{OUT} changes on the plot in LabVIEW. The null center voltage will no longer be 0 (or null). In fact it will decrease (constant current) as the gauge resistance increases with increasing strain.
5. After testing the strain gauge, record the change in output voltage as the soda can is opened (releasing pressure within the can). Ensure this data is written to a spreadsheet for data processing.
6. With the collection of output voltages we can model the change in pressure and determine the pressure inside the unopened can. Next up: **Data Processing**.

4 Data Processing

4.1 Variables and Equations

I.

For part 1, our first values will be in voltages. We will convert these to pressures using the following equation:

$$P = \frac{V}{0.004} - 14.7$$

We can also represent the axial and tangential strain of the pressure vessel through the following equations:

$$\epsilon_{axial} = \frac{PR}{2Et}(1 - 2\nu)$$

$$\epsilon_{tangential} = \frac{PR}{2Et}(2 - \nu)$$

For the strain gauge on the polycarbonate cylinder, we can balance the voltage to strains through the following relation:

$$\frac{V_{out}}{V_{DC}} = \frac{S_g}{2}(\epsilon_t - \epsilon_a)$$

In this case, V_{DC} is the excitation voltage, and S_g is the gauge factor.

For the quarter-bridge gauge on the soda can, the voltage imbalance is related to the strain through the following relation:

$$\frac{V_{out}}{V_{DC}} = \frac{S_g}{4}(\epsilon_t)$$

Our materials have the following properties:

Table 1: Material Data

Material	Young's Modulus (GPa)	Poisson's Ratio
Aluminum	70	0.33
PolyCarbonate	2.4	0.37

5 Results and Analysis

For part 1, we measured the following values for the radius and thickness of the poly-carbonate vessel:

Table 2: Part 1 Values

Parameter	Value
Radius (mm)	50.8 ± 0.0254
Thickness (mm)	3.175 ± 0.0254
V_{DC} (V)	5
Gage Factor	2.11
Scale Factor ($\frac{\text{psia}}{\text{mV}}$)	2

The values for the pressure vessel with the pressure transducer are in the following table:

Table 3: Pressure Transducer Data

Gage Read (MPa)	Pressure (V)	STD	Pressure (MPa)	Uncertainty (MPa)
0.000	0.0071	0.0005	-0.00344738	0.000159801
0.0344738	0.0095	0.00057	0.029647468	0.000159801
0.0689476	0.0119	0.00054	0.062742316	0.000159801
0.1034214	0.0145	0.00055	0.098595068	0.000159801
0.1378952	0.0168	0.0005	0.130310964	0.000159801
0.172369	0.0194	0.00055	0.166163716	0.000159801
0.2068428	0.0215	0.00055	0.195121708	0.000159801

For the uncertainty values, we used the $\sqrt{\delta^2}$ equation derived in class, where δ is the mean standard deviation for each of the values with a standard deviation.

This is the data for the strain gauge:

Table 4: Strain Gauge Data

Gage Read (MPa)	Strain (V)	STD	Pressure (MPa)	Uncertainty (MPa)
0.000	-0.01	0.00035	0	0.008023373
0.0344738	-0.011	0.00035	0.041512436	0.008023373
0.0689476	-0.0121	0.00037	0.087176117	0.008023373
0.1034214	-0.01295	0.00033	0.122461687	0.008023373
0.1378952	-0.0137	0.00036	0.153596015	0.008023373
0.172369	-0.0146	0.00037	0.190957208	0.008023373
0.2068428	-0.0153	0.00034	0.220015913	0.008023373

Comparing each of our sensors and different data points, we get the following:

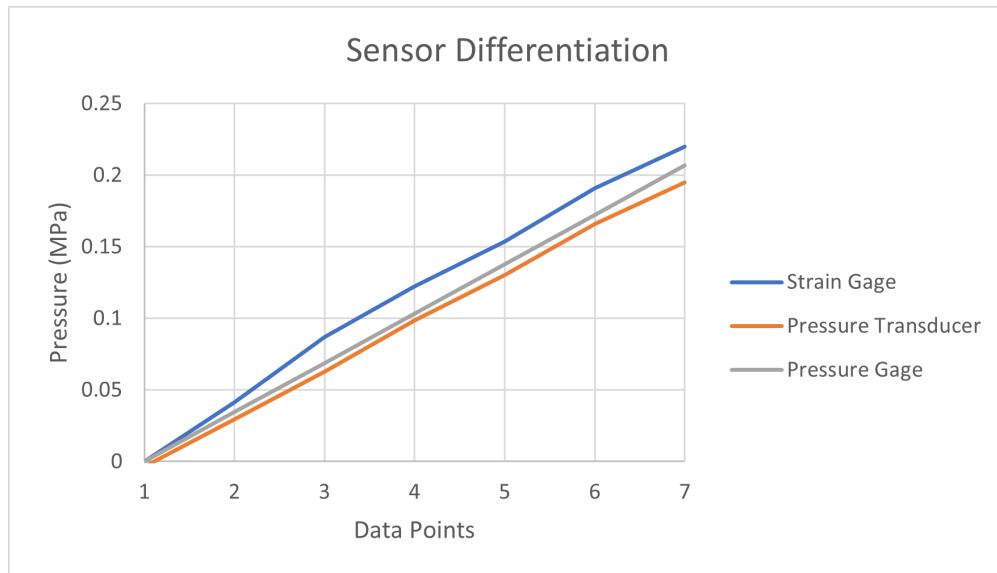


Figure 3: Sensor Differentiation

Table 5: Gauge Comparison

Data Points	Strain Gauge	Pressure Transducer	Pressure Gage
1	0	-0.00344738	0
2	0.041512436	0.029647468	0.0344738
3	0.087176117	0.062742316	0.0689476
4	0.122461687	0.098595068	0.1034214
5	0.153596015	0.130310964	0.1378952
6	0.190957208	0.166163716	0.172369
7	0.220015913	0.195121708	0.2068428

As for the soda can, we have the following data:

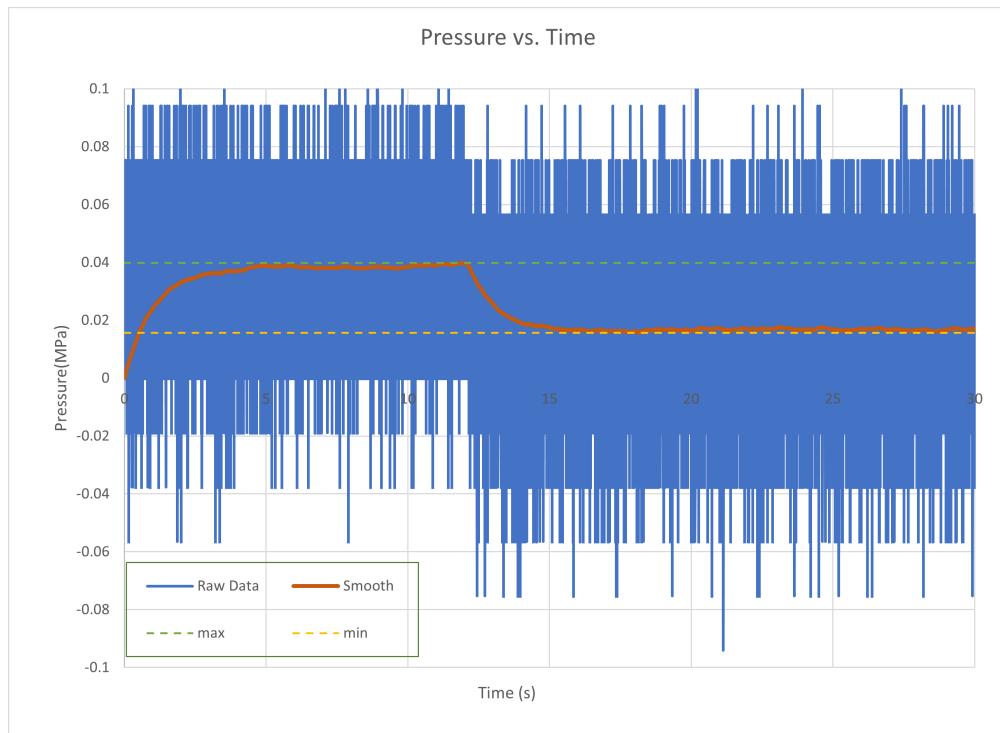


Figure 4: Coke Can

While the pressure drop from the coke can is not super significant, we can still see a drop in pressure from the can. This was the cleanest data we had in our results from the coke can after three attempts.

As for our data, while it is reasonably accurate, there are some discrepancies or sources of error that we can account for.

During the experiment, we encountered several potential sources of error that could have affected the accuracy of our measurements. Firstly, the gauge on the pressure vessel may not have been entirely accurate, leading to discrepancies in the recorded data. Additionally, the true measurements may have been taken with an inaccurate gauge, resulting in larger uncertainties than initially estimated. Furthermore, the pressure vessel exhibited signs of leakage over time, which could have influenced the recorded pressure values. It is also possible that the temperature of the pressure vessel differed from the ambient room temperature, introducing further variability in the data. Moreover, there could have been errors in the voltage interpretation by the data acquisition system (DAQ), leading to inaccuracies in the recorded values. Lastly, there might have been a delay in pressure changes due to the opening of the valve, affecting the timing and magnitude of the recorded pressure readings.

6 Conclusion

Appendices

t-Distribution Tables

Table A11. t-Distribution

Values of z for given values of the distribution function $F(z)$ (cf. p. 754).

Example: For 9 degrees of freedom, $z = 1.83$ when $F(z) = 0.95$.

$F(z)$	Number of Degrees of Freedom									
	1	2	3	4	5	6	7	8	9	10
0.5	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
0.6	0.33	0.29	0.28	0.27	0.27	0.27	0.26	0.26	0.26	0.26
0.7	0.73	0.62	0.58	0.57	0.56	0.55	0.55	0.55	0.54	0.54
0.8	1.38	1.06	0.98	0.94	0.92	0.91	0.90	0.89	0.88	0.88
0.9	3.08	1.89	1.64	1.53	1.48	1.44	1.42	1.40	1.38	1.37
0.95	6.31	2.92	2.35	2.13	2.02	1.94	1.90	1.86	1.83	1.81
0.975	12.7	4.30	3.18	2.78	2.57	2.45	2.37	2.31	2.26	2.23
0.99	31.8	6.97	4.54	3.75	3.37	3.14	3.00	2.90	2.82	2.76
0.995	63.7	9.93	5.84	4.60	4.03	3.71	3.50	3.36	3.25	3.17
0.999	318.3	22.3	10.2	7.17	5.89	5.21	4.79	4.50	4.30	4.14

$F(z)$	Number of Degrees of Freedom									
	11	12	13	14	15	16	17	18	19	20
0.5	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
0.6	0.26	0.26	0.26	0.26	0.26	0.26	0.26	0.26	0.26	0.26
0.7	0.54	0.54	0.54	0.54	0.54	0.54	0.53	0.53	0.53	0.53
0.8	0.88	0.87	0.87	0.87	0.87	0.87	0.86	0.86	0.86	0.86
0.9	1.36	1.36	1.35	1.35	1.34	1.34	1.33	1.33	1.33	1.33
0.95	1.80	1.78	1.77	1.76	1.75	1.75	1.74	1.73	1.73	1.73
0.975	2.20	2.18	2.16	2.15	2.13	2.12	2.11	2.10	2.09	2.09
0.99	2.72	2.68	2.65	2.62	2.60	2.58	2.57	2.55	2.54	2.53
0.995	3.11	3.06	3.01	2.98	2.95	2.92	2.90	2.88	2.86	2.85
0.999	4.03	3.93	3.85	3.79	3.73	3.69	3.65	3.61	3.58	3.55

$F(z)$	Number of Degrees of Freedom									
	22	24	26	28	30	40	50	100	200	∞
0.5	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
0.6	0.26	0.26	0.26	0.26	0.26	0.26	0.26	0.25	0.25	0.25
0.7	0.53	0.53	0.53	0.53	0.53	0.53	0.53	0.53	0.53	0.52
0.8	0.86	0.86	0.86	0.86	0.85	0.85	0.85	0.85	0.84	0.84
0.9	1.32	1.32	1.32	1.31	1.31	1.30	1.30	1.29	1.29	1.28
0.95	1.72	1.71	1.71	1.70	1.70	1.68	1.68	1.66	1.65	1.65
0.975	2.07	2.06	2.06	2.05	2.04	2.02	2.01	1.98	1.97	1.96
0.99	2.51	2.49	2.48	2.47	2.46	2.42	2.40	2.37	2.35	2.33
0.995	2.82	2.80	2.78	2.76	2.75	2.70	2.68	2.63	2.60	2.58
0.999	3.51	3.47	3.44	3.41	3.39	3.31	3.26	3.17	3.13	3.09

NI-9215 Datasheet

NI-9215 Datasheet

PX309-100AV Pressure Transducer Datasheet

PX309-100AV Pressure Transducer Datasheet